




Ford Oil Pump Pickup

Refer to a service manual for complete pickup removal/installation procedures.

Make sure pickup is cleaned thoroughly before installing.

Mount pickup to oil pump and main caps, (see diagram below). When you remove main cap bolt to replace with the supplied stud, loosen the other bolt on the main cap also. Torque the main cap mounting bolt and nut to manufacturer specification. Tighten the attaching nuts to the oil pump and measure the distance between the pickup screen and the bottom of the oil pan. A clearance of 1/4" to 3/8" is recommended.

To check pickup height, put clay or putty on the four corners of the pickup screen. Place oil pan onto engine and secure tightly. Remove oil pan and measure the height of the crushed clay or putty. If necessary, make any adjustments.

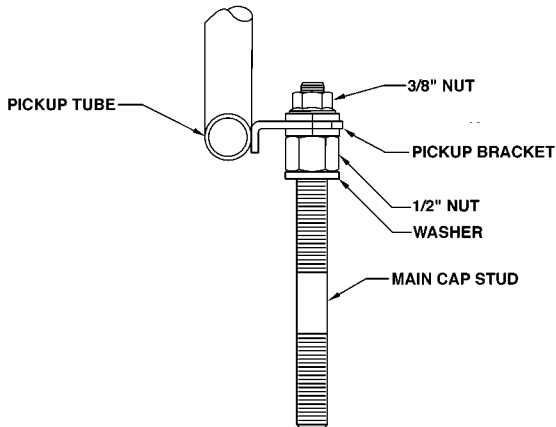

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906