27249 MAGNETIC PICKUP INSTALL INSTRUCTIONS 1-14-09

- 1. REMOVE OLD UNIT.
- 2. APPLY A SMALL AMOUNT OF "MEDIUM" THREAD LOCK TO THE THREADS OF THE SCREWS THAT SECURE THE PICKUP TO THE DIST.
- 3. LOOSELY BOLT IN NEW UNIT, VERIFY MAGNET HAS THE SOUTH POLE FACING UP.
- 4. SET AIR GAP BETWEEN RELUCTOR AND PICKUP TO .030"
- 5. TIGHTEN SCREWS, INSTALL PLUG FROM THE MAGNETIC PICKUP ONTO THE CONNECTOR ON IGNITION MODULE.
- 6. **SET ENGINE TIMING!**