



MOROSO VALVE COVER GASKET INSTRUCTIONS

Moroso Valve Cover Gaskets should only be used on valve covers with a flat rail.

Moroso Valve Covers Gaskets are not intended to be used on stamped or cast covers with a gasket retention groove. These covers may not allow the gasket to seal properly and will cause leaks.

Valve covers using 1/4 to 5/16 hardware should be torqued 80 to 100 inch/pound respectively, and tightened in a crisscross pattern.

***For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time***

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

93020INST