



OIL PAN GASKET INSTRUCTIONS

PART LIST

- 1 Multi-Piece Gasket

INSTALLATION INSTRUCTIONS

1. If re-installing a used oil pan, check that the rails are flat around the mounting holes, and are not concave where the fasteners contact the oil pan rail.
2. Thoroughly clean the engine block sealing surface, the front cover, and rear main cap where the gasket seats. Be sure all old sealant, gasket residue, and oil has been removed and the sealing surfaces are clean and dry.
3. Use a quality RTV sealant in the corners where the timing cover meets the engine block, and also in the rectangular pockets where the flat gasket mates to the rubber gasket.

***For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time***

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906