




## BATTERY CABLE KIT

### INSTALLATION INSTRUCTIONS

1. Determine the lengths for the positive and negative Battery Cables. Be sure the cables clear all moving components, (belts, fan blades, etc.), and exhaust pipes and headers.
2. Cut the cable to the proper length. On top post batteries make sure you use the proper Terminal for the length you are cutting. The positive post is larger than the negative post and the Terminals are made accordingly.
3. On Ford vehicles, Moroso Battery Cable Remote Fitting End Kit p/n 74170 will be needed to splice into the cable for the starter solenoid.
4. Install the Battery Cable into the Terminal End Fitting as shown in diagram below, then screw on Terminal. Be sure to install any extra leads for accessories into the Terminal End Fitting with the cable during assembly.
5. On most cars there are extra power leads and chassis grounds that must be connected to the battery at the cable end. Clip these leads off as close to the old battery cable ends as possible. Strip back the insulation and crimp into the leads provided on the new Battery Terminal Ends. These leads must be connected. Replace any leads that are in poor condition with the proper gauge and length wire, especially fusible links.

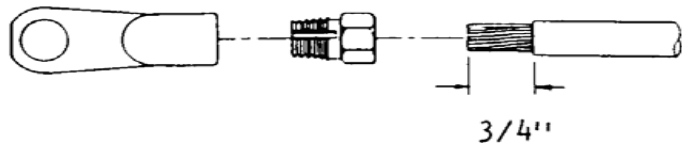

*For Technical Assistance, Call Moroso's Tech Line at  
(203) 458-0542, 8:30am – 5:00pm Eastern Time*

**MOROSO PERFORMANCE PRODUCTS, INC**  
80 CARTER DR • P.O. Box 1470 • GUILFORD, CT 06437  
Phone: (203) 453-6571 • FAX (203) 453-6906


Visit Us At [www.moroso.com](http://www.moroso.com)



## BATTERY CABLE KIT

### INSTALLATION INSTRUCTIONS

1. Determine the lengths for the positive and negative Battery Cables. Be sure the cables clear all moving components, (belts, fan blades, etc.), and exhaust pipes and headers.
2. Cut the cable to the proper length. On top post batteries make sure you use the proper Terminal for the length you are cutting. The positive post is larger than the negative post and the Terminals are made accordingly.
3. On Ford vehicles, Moroso Battery Cable Remote Fitting End Kit p/n 74170 will be needed to splice into the cable for the starter solenoid.
4. Install the Battery Cable into the Terminal End Fitting as shown in diagram below, then screw on Terminal. Be sure to install any extra leads for accessories into the Terminal End Fitting with the cable during assembly.
5. On most cars there are extra power leads and chassis grounds that must be connected to the battery at the cable end. Clip these leads off as close to the old battery cable ends as possible. Strip back the insulation and crimp into the leads provided on the new Battery Terminal Ends. These leads must be connected. Replace any leads that are in poor condition with the proper gauge and length wire, especially fusible links.

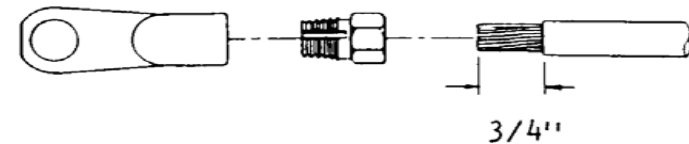

*For Technical Assistance, Call Moroso's Tech Line at  
(203) 458-0542, 8:30am – 5:00pm Eastern Time*

**MOROSO PERFORMANCE PRODUCTS, INC**  
80 CARTER DR • P.O. Box 1470 • GUILFORD, CT 06437  
Phone: (203) 453-6571 • FAX (203) 453-6906

Visit Us At [www.moroso.com](http://www.moroso.com)