




Ford Windage Tray P/N 22935

This Windage Tray is designed to fit Ford 351W engines and will need to be secured with Moroso Stud Kit P/N 38192.

See drawing below for reference.

1. After removing the oil pan and oil pump pickup, remove the #2 and #4 main cap bolts and replace with studs from Moroso Stud Kit P/N 38192. The order of assembly is Stud – Washer – 1/2" Nut.
2. If a new Moroso P/N 24532 Pickup has not already been installed, remove the #3 passenger side main cap bolt and replace with the new stud supplied with the oil pump pickup. Follow the pickup instructions for procedure.
3. Torque the new main cap studs to factory recommended specification.
4. Place Windage Tray on new studs as shown in diagram. Fasten using the nuts and washers supplied with the studs.
5. Attach new oil pump pickup to the oil pump and #3 main cap stud.
6. Check that all hardware is tight. Check clearance between pickup screen and the bottom of the oil pan before running engine, there should be 1/4" to 3/8" clearance. Replace gasket and oil pan.

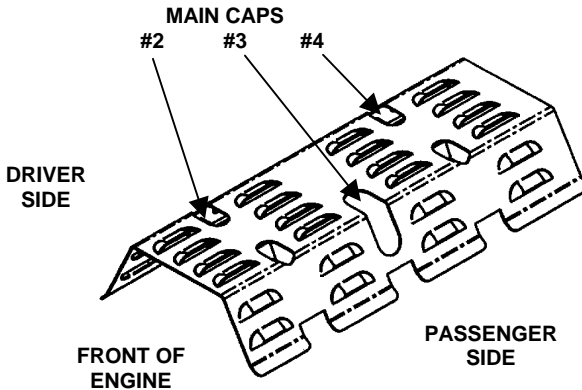

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906