




## INSTALLATION INSTRUCTIONS P/N 64031

### PARTS LIST

- 1 .120" Aluminum Shim
- 1 .050" Aluminum Shim
- 1 .070" Aluminum Shim

### INSTALLATION

This crank pulley shim kit has been designed to fit both Small Block and Big Block Chevrolet engines. To use this kit on a Big Block Chevy, cut the tabs off (see below) and grind or file the radius smooth.

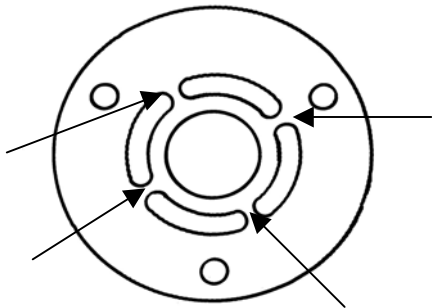

***For Technical Assistance, Call Moroso's Tech Line at  
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time***

MOROSO PERFORMANCE PRODUCTS, INC  
80 CARTER DR • GUILFORD, CT 06437  
Phone: (203) 453-6571 • Fax: (203) 453-6906