




No. 71900 – SPARK PLUG INDEXING WASHERS INSTALLATION INSTRUCTIONS

Use with 14mm Tapered-seat Spark Plugs ONLY! For Flat-Seat Plugs use Moroso #71910.

These washers allow you to "index" the spark plug electrode in each cylinder to a desired position. Kit contains 10 washers of each thickness (.010", .021" and .032"), which may be reused if not over tightened.

1. Place an identifying mark on the exposed portion of the spark plug (i.e., insulator) to indicate location of electrode, screw plug into desired cylinder, and tighten to 10 ft./lbs.
2. Using the identifying mark, note how many degrees the spark plug must rotate to place the electrode in its proper (i.e., for piston dome clearance) position and remove the spark plug.
3. Select the proper washer as follows: a .010" washer will rotate the plug clockwise 105°, a .021" washer 210°, and .032" washer will rotate the plug 315°.

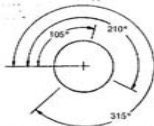

.010" = Plain Copper; .021" = Yellow; .032" = Clear Zinc

4. Place the correct washer on the plug and tighten to 10 ft./lbs. Using the identification mark, check electrode for correct position.

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906