



## Universal Loom Kits

Secures spark plug wires to keep them protected from crossfire and hot engine components.

Fits Moroso and other plug wire up to 11mm in diameter. Slight modifications are required to fit 8.5mm to 11mm wire or wire fitted with insulating sleeve.

### INSTALLATION

1. Install chrome-plated brackets to valve cover mounting location as shown in diagram on back. Use stock valve cover fasteners or Moroso Valve Cover Wing Nuts to hold them in place.
2. Install 2-hole or 3-hole looms onto chrome brackets as needed to secure wires.
3. Simply "snap" wires into looms -- a silicone spray lubricant helps ease the wires into the openings.
4. When using wire larger than 8mm or Moroso Insulating Sleeve, use a file to remove the "nubs" as illustrated on reverse side.

***For Technical Assistance, call Moroso's Tech Line at  
(203) 458-0542, 8:30am-5:00pm Eastern Time***

### **MOROSO PERFORMANCE PRODUCTS**


**80 Carter Drive • P.O. Box 1470 • Guilford, CT 06437**

**Phone: (203) 453-6571 • Fax: (203) 458-3581**


2-Hole Loom

3-Hole Loom

2-Hole Loom

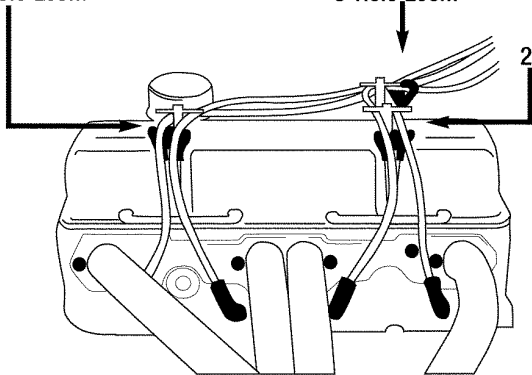

Remove when  
using Insulated  
Wire Sleeve or  
8.5mm to  
11mm wire

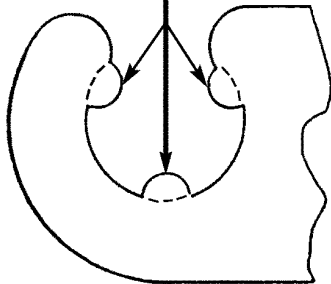

Use Silicone Spray Lube  
on plug wires to prevent  
cutting wires when  
installing into loom.