



Four Hole Loom Kits

Secures spark plug wires to keep them protected from crossfire and hot engine components.

Fits Moroso and other plug wire up to 11mm in diameter. Slight modifications are required to fit 8.5mm to 11mm wire or wire fitted with insulating sleeve.

INSTALLATION

1. Install chrome-plated brackets with looms attached to valve cover mounting location as show in diagram on back. Use stock valve cover fasteners or Moroso Valve Cover Wing Nuts to hold them in place.
2. Simply “snap” wires into looms—a silicone spray lubricant helps ease the wires into the openings.
3. When using wire larger than 8mm or Moroso Insulating Sleeve, use a file to remove the “nubs” as illustrated on reverse side.


REV. B

050813

72180INST

***For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time***

MOROSO PERFORMANCE PRODUCTS, INC

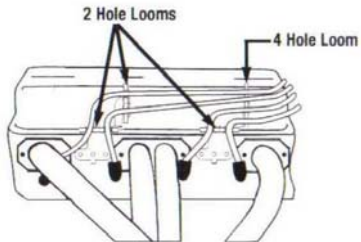

Use Silicone Spray Lube
on plug wires to prevent
cutting wires when
installing into loom.

