




## Drive Kit - SBFord

P/N 63846

### Parts List

1 Spacer .350"	1 Split Lock Washer	1 Pulley, V-Belt
1 Lock Washer 7/16"	1 Spacer .500"	1 Drive Gear 16T
1 Woodruff Key	1 Stepped Steel Washer	2 Spacers .905"
2 Belt Guides	1 Mandrel	1 HHCS 7/16 x 7.25"
1 Drive Hub	1 SBF, Drive Spacer	4 Socket Head Cap Screws
1 Square Key .187"	1 Square Key .125"	

This Drive Kit is designed to work with a Moroso Dry Sump Pump and Moroso Vacuum Pump mounted with a Moroso P/N 63911 Ford Vacuum Pump Mounting Bracket, #63810 Alt. Mounting Bracket. The diagram below shows one of the many arrangements of the Drive Kit.

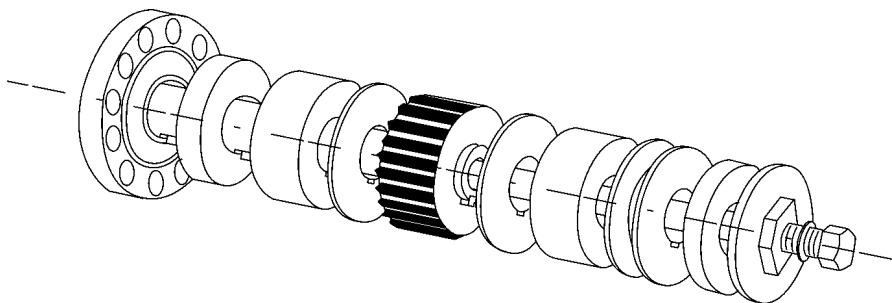

**For Technical Assistance, Call Moroso's Tech Line at  
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC  
80 CARTER DR • GUILFORD, CT 06437  
Phone: (203) 453-6571 • Fax: (203) 453-6906

**Visit Us At [www.moroso.com](http://www.moroso.com)**