



## SPARK PLUG WIRE SEPARATOR KITS INSTALLATION INSTRUCTIONS

**No. 72160** – 7-9mm, Blue

**No. 72161** – 7-9mm, Red

**No. 72162** – 7-9mm, Yellow

**No. 72163** – 7-9mm, Black

**No. 73160** – 11mm, Blue

**No. 73163** – 11mm, Black

High-temperature Wire Separators keep spark plug wires evenly spaced and protected from hot engine components. Can be used individually or as replacements for Moroso Loom Kits.

**Part Nos. 72160-72163** fit Moroso and other plug wires 7-9mm in diameter. Slight modifications required to fit larger diameter wire or wire fitted with insulating sleeve.

**Part Nos. 73160-73163** fit Moroso 11mm plug wires/wires with insulating sleeve.


**Parts List:** (2) Two-Hole Separators, (2) Three-Hole Separators, (2) Four-Hole Separators.

1. Use appropriate 2-, 3-, or 4-hole separators at any location between the distributor and spark plugs to keep wires away from hot engine parts and other potential trouble spots.

*NOTE: To achieve a more secure routing formation use Moroso Loom Kits, which include chrome mounting brackets, looms and separators.*

2. Wires simply “snap” into place – a silicone spray lubricant helps ease the wires into the openings.

3. When using part **Nos. 72160 and 72163** on wire larger than 9mm or Moroso Insulating Sleeve, use a file to remove the “nubs” formed into the wire openings of the plastic looms/separators.

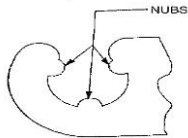

**For Technical Assistance, Call Moroso's Tech Line at  
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC  
80 CARTER DR • GUILFORD, CT 06437  
Phone: (203) 453-6571 • Fax: (203) 453-6906

Rev. C  
061419

**Visit Us At [www.moroso.com](http://www.moroso.com)**

INST72160