


DISCONNECT BATTERY TERMINALS BEFORE ANY WIRING IS PERFORMED

- 1. Locate desired installation area. Drill holes and install relay.
- 2. Follow the diagram below. Install the resistor (under the black shrink sleeve), with the eye terminals on each end, onto the two small lugs using the washers and nuts provided.
- 3. A ground wire must be attached to either of the small terminal lug (see diagram).
- NOTE: Always verify car shuts off when battery disconnect switch is turned off!

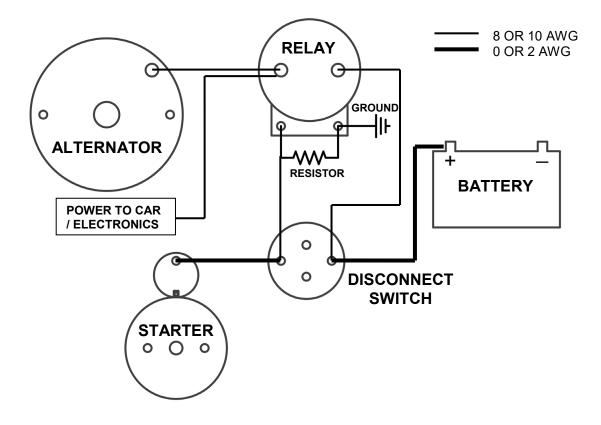

For Technical Assistance, Call Moroso's Tech Line at (203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS, INC 80 CARTER DR • GUILFORD, CT 06437-2116 Phone: (203) 453-6571 • Fax: (203) 453-6906

Rev. C 41120

Visit Us At www.moroso.com

74107INST