


## INSTALLATION INSTRUCTIONS P/N: C3187 / C3197

NOTE: When starting to position the roll cage components in relation to the existing roll bar, have the driver's seat in the correct location with the driver sitting in the seat. The seat needs to be centered within the Front Cage Hoop and Outer Helmet Tube to allow for proper clearance for the driver's shoulders and for the driver's helmet.

It is important to note that chrome-moly roll bars MUST be TIG welded as per sanctioning body rules. Mild steel roll bars may be MIG or TIG welded.

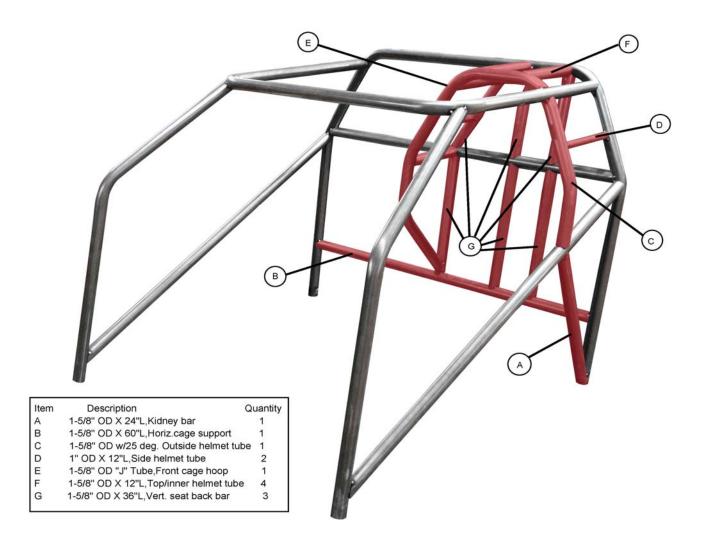

For Technical Assistance, call Competition Engineering's Tech Line at (203) 458-0542, 8:30am-5:00pm Eastern Time

80 Carter Drive • P.O. Box 1470 • Guilford, CT 06437 Phone: (203) 453-5200 • Fax: (203) 453-6906