



Press-In Breather Adapter P/N: 68860

Parts List

68860100 - Copo Breather Adapter


68010200 - Valve Cover Grommet

Note:

The 68010200 must be cut for the 68860100 to retain properly in the valve cover and breathe properly.

Instructions:

1. Scribe radially around the grommet at a height of $9/16$ - $19/32$
2. Place an approximately 1.00" outer diameter socket (18mm) inside the rubber grommet, this will prevent it from deforming when trying to cut along the scribed line.
3. Using a razor blade carefully cut the grommet along the scribed line. Remove the socket.
4. Insert the grommet into the valve cover, making sure the groove of the grommet is seated in the valve cover.
5. Apply some lubrication to the inside of the grommet, and then press in the breather adapter until it sits flush to the top of the grommet.

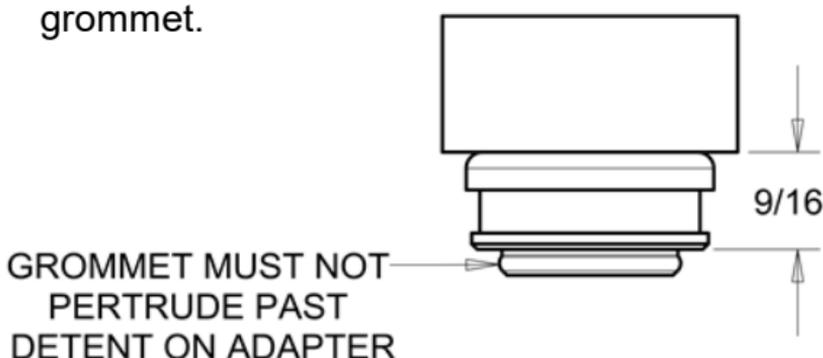

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am - 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906