




## Installation Instructions

### 72280 - Super HEI Ignition Dress Up Kit

- 1) Remove the original wires, wire separators, distributor cap and rotor from the engine. Remove the coil from the original distributor by undoing the screws that secure the coil cover and the coil to the cap. Keep the coil for later use.
- 2) Install the new carbon brush (with its attached spring) and the supplied silicone washer into the new cap. (You can use the original distributor cap to determine the correct orientation of the brush, spring and washer). Smear a small amount of the dielectric grease supplied with the kit to the end of the carbon brush that contacts the coil.
- 3) Install the original coil into the new distributor cap.
- 4) Install the new rotor onto the distributor shaft, making sure it is keyed to the shaft correctly and pressed all the way down.
- 5) Install the distributor cap.
- 6) As part of the display packaging, some of the wire looms are attached to the chrome mounting brackets. Attach the remaining looms onto the chrome brackets, and install the brackets and wire separators as shown in the picture below:

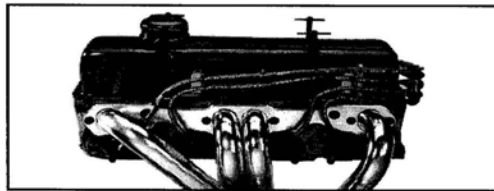


The chrome loom brackets are installed with the existing valve cover fasteners. The spark plug wires simply "snap" into the wire looms and separators. A silicone spray lubricant makes the job easier. If there is any plastic "flashing" (left over from the manufacturing process) that interferes with the wire insertion, remove it with a knife or file.

Connect each wire to the correct spark plug and corresponding location on the cap. To simplify the installation, each wire is cut to the correct length and identified with the corresponding cylinder number. Starting at the front of the engine, the cylinder numbers are as follows:

- Passenger-Side: 2-4-6-8
- Driver-Side: 1-3-5-7

The correct location of each wire on the cap can be determined from the diagram below:

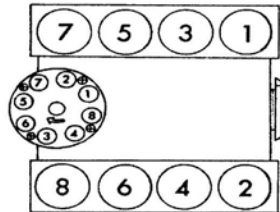

#### Parts List:

- Distributor Cap
- Carbon Brush w/Spring
- Silicone Washer
- Dielectric Grease Pack
- Rotor
- Loom & Separator Kit
- Wire Set

**For Technical Assistance, Call Moroso's Tech Line at  
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC  
80 CARTER DR • GUILFORD, CT 06437-2116  
Phone: (203) 453-6571 • Fax: (203) 453-6906