




## PRIMARY COIL WIRE EXTENSION KIT

Part# 72391

### Installation instructions

1. Slide the dark red seal(s) over the wire end.
2. Strip the wire(s) on one end .25" .
3. Crimp the male pins on to the wires. (See photo).
4. Slide seal back on to terminal and Crimp seal on to end of terminal (see photo).
5. Insert terminated end into the female body connector in the following manner  
Black wire to A, Brown wire to B, Red wire to C, Orange wire to D, and install wire retainer cover.

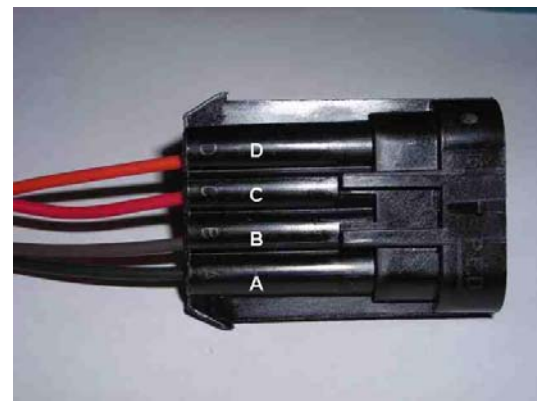

For Technical Assistance, Call Moroso's Tech Line at  
**(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC  
80 CARTER DR • GUILFORD, CT 06437-2116  
Phone: (203) 453-6571 • Fax: (203) 453-6906

Rev. A  
101207

Visit Us At [www.moroso.com](http://www.moroso.com)

723910INS