



Parts List

- (1) Tank body
- (1) Billet Clamp
- (1) Billet Saddle
- (1) Stainless Steel Mounting Bracket
- (2) 90 Degree Barbed Fittings
- (1) Length of ½" Hose
- (4) ¼-20 x 5/8 Stainless Steel SHCS

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com

Rev B
3/15/14

85628_85629INST




Step 1: Remove strut tower brace.

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.
80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 2: Remove Intake cover.

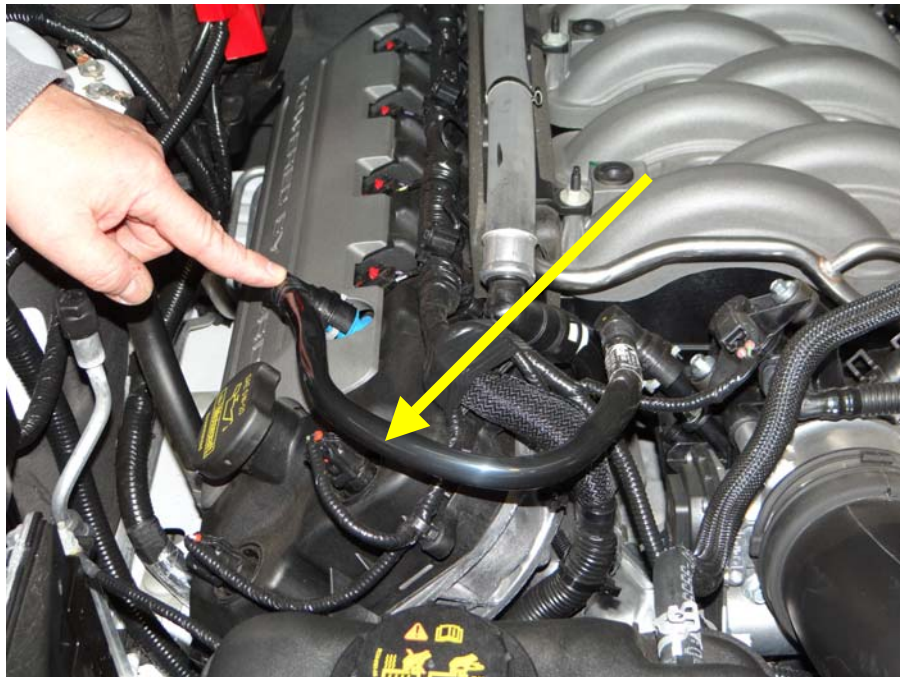

Step 3: Locate PCV tube.

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 4: Remove PCV tube from vehicle.



Step 5: Cut 90 degree fitting from PCV tube.

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 6: Cut 2nd 90 degree fitting from PCV tube.

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.
80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 7: Insert (1) 90 degree fitting into ½" hose.



Step 8: Install 90 degree fitting to intake nipple.

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 9: Re-install intake cover.




Step 10: Route hose as shown.

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 11: Re-install strut tower brace. **Do not install fasteners.**

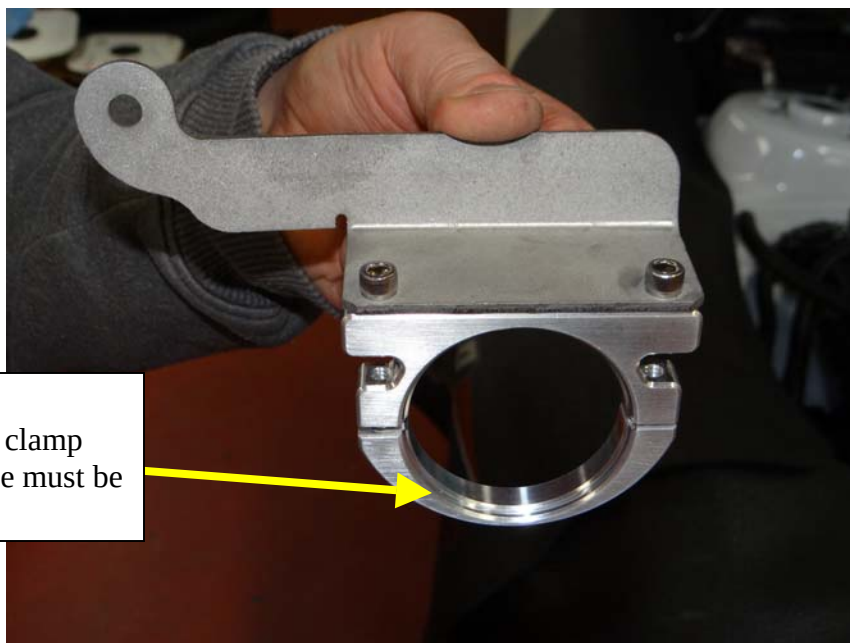

Note:
Relief on billet clamp
and billet saddle must be
facing down.

Step 12: Assemble Stainless mounting bracket, billet clamp and billet saddle as shown with (4) ¼-20 SHCS. **Do not tighten billet clamp to billet saddle.**

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.
80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 13: Install assembly as shown on passenger side of vehicle as shown. Re-install hardware for strut tower brace.



Step 14: Assemble Air Oil Separator as shown using Teflon tape on fittings.

For Technical Assistance, call Moroso's Tech Line

(203)-458-0542, 8:30am-5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE

GUILFORD, CT 06437

www.moroso.com



Step 15: Insert Air Oil Separator into clamp assembly.



Step 16: Orientate fittings towards engine as shown.

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 17: Set height to approximately 1" and tighten clamp.



Step 18: Route ½" hose to Air Oil Separator and mark hose for trimming.

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 19: Trim hose.

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.
80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 20: Insert (2nd) 90 degree fitting into trimmed off ½" hose.

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com




Step 21: Insert 90 degree fitting over valve cover nipple.



Step 22: Route hose to Air Oil Separator fitting and mark for trimming. Trim hose and install.

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.
80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com

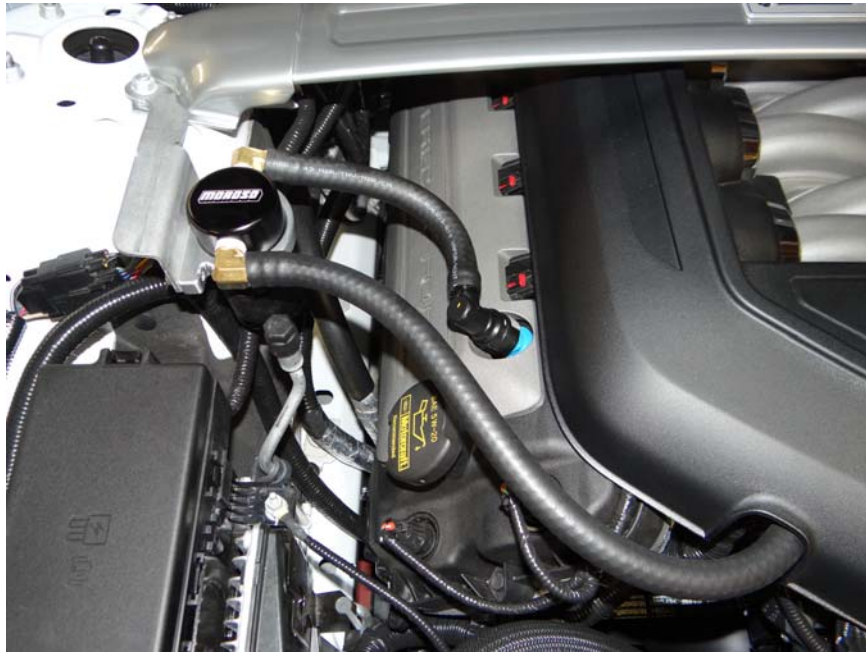

Installation Complete

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.
80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



For draining un-screw bottom cup

Draining of Air Oil Separator is needed; this will depend on driving conditions (i.e.) normal day to day driving check every 1,000 miles until a baseline is established. A good baseline is to drain the Air Oil Separator when it is about HALF full. This will vary with temperatures (cold winters vs. hot summers). For track usage Air Oil Separator will need to be drained after every outing.

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.
80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com